

MANUAL

AKO Heating system

Set the temperature

The display shows the current temperature.

Hold the "SET" button for approx. 6 sec. to regulate the temperature. The red diode flashes when the temperature can be set.

Press the arrow keys to adjust the temperature up or down.

When the desired temperature is found, press the "SET" button once.

The system heats up when the red diode lights up in the display.

Note: The sensor for the heating control is located in the middle of the bus above the passengers at the edge of the car's center lane.

